



Flush/Recessed Pull - Lip at Top
Install with screws from back or glue in; panel routed out from front.

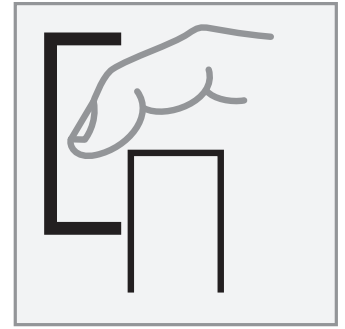


Handle Free Hardware
Channel installed in cabinet box.

Cabinet Hardware Guide


www.schwinnhardware.com

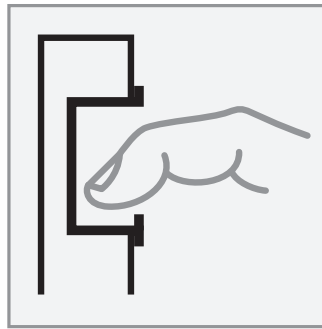


Flush/Recessed Pull - Lip at Bottom
Install with screws from back or glue in; panel routed out from front.

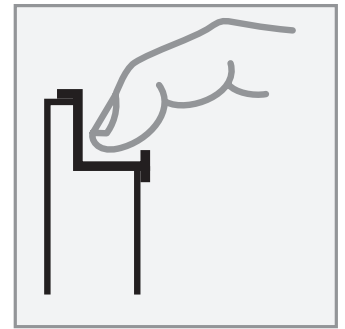


Edge Pull
Install on edge with screws; panel routed out on edge.

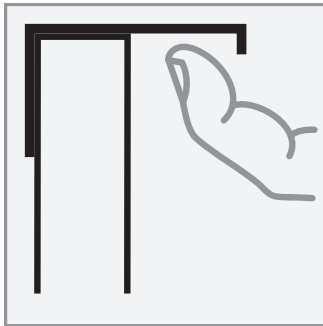


Tab/Edge Pull
Install on edge or over edge with screws; with or without mortise.

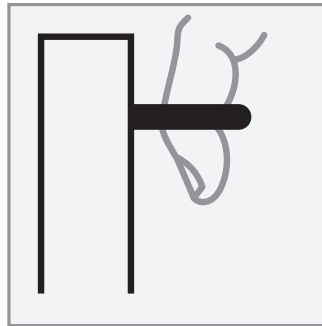


Reach Through Pull
Install with screws through panel.

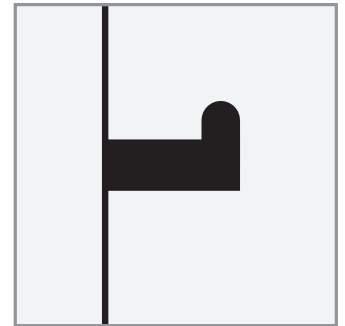


Hook
Concealed or face mounted with bracket, screws and anchors depending on wall conditions.

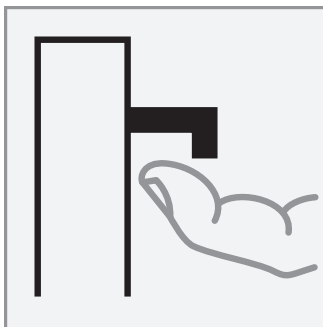

Face Mounted Pull
Install with screws through panel.

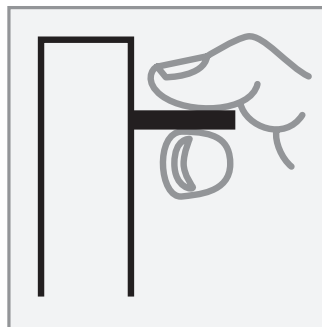

Knob
Install with screw(s) through panel.

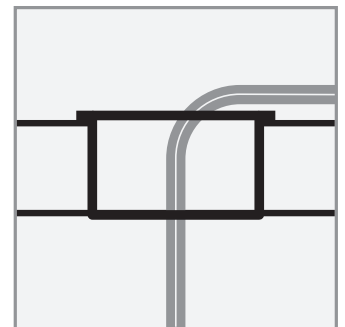

Grommet/Cable Grommet
With or without lid; press fit or glue in hole through counter or panel.