


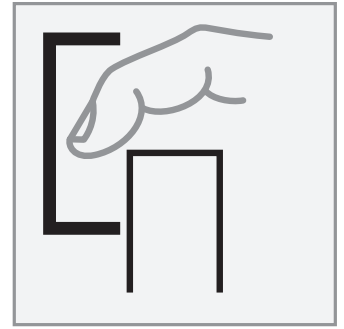


**Flush/Recessed Pull - Lip at Top**  
Install with screws from back or glue in; panel routed out from front.




**Handle Free Hardware**  
Channel installed in cabinet box.

## Cabinet Hardware Guide


[www.schwinnhardware.com](http://www.schwinnhardware.com)

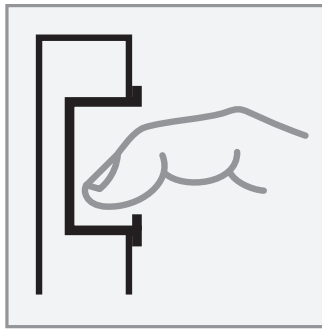


**Flush/Recessed Pull - Lip at Bottom**  
Install with screws from back or glue in; panel routed out from front.

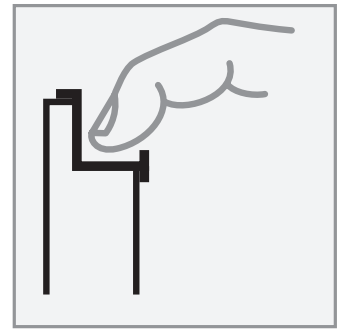


**Edge Pull**  
Install on edge with screws; panel routed out on edge.

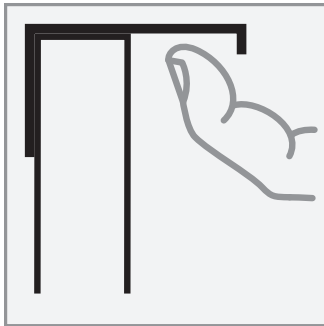


**Tab/Edge Pull**  
Install on edge or over edge with screws; with or without mortise.

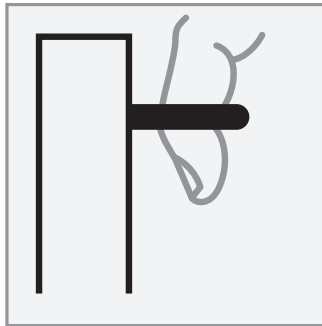


**Reach Through Handle**  
Install with screws through panel.

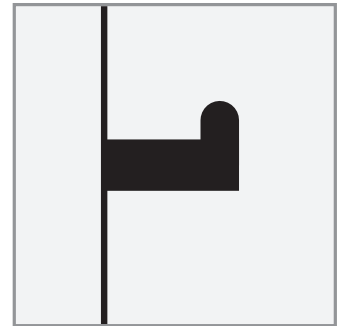


**Hook**  
Concealed or face mounted with bracket, screws and anchors depending on wall conditions.

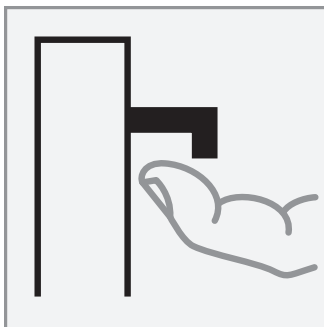

**Face Mounted Pull**  
Install with screws through panel.

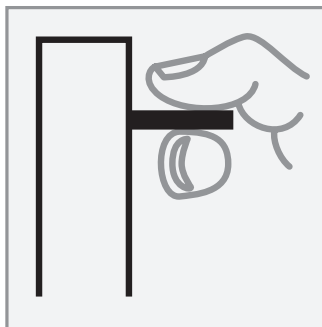

**Knob**  
Install with screw(s) through panel.

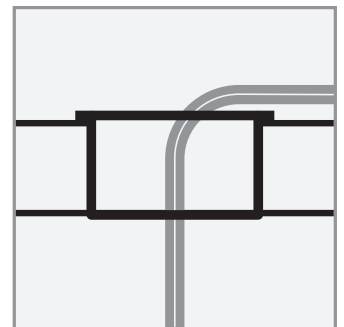

**Grommet/Cable Grommet**  
With or without lid; press fit or glue in hole through counter or panel.